 



How to operate the Electric Iron

Ironing Temperature


1. Adjust the temperature control dial to the position you want according to the following fabric indication:

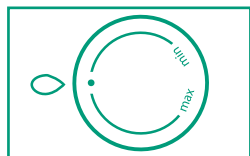

 ● Synthetics

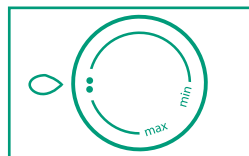

● ● Silk / Wool

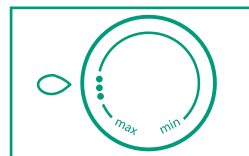

● ● ● Linen / Cotton

2. When the pilot lamp goes off and has come on again, you may start ironing.

3. The iron will automatically turn on and off while you are ironing. This is normal as it is equipped with an automatic temperature sensor to provide you with the ultimate desired temperature.

4. Always keep the iron moving.

Tips:

If you are unsure of the fabric type, you may begin with a lower temperature and gradually increase to avoid the fabric from being burnt.

KHIND
Delivering Happiness



● ● ● Electric Iron

 
Instruction Manual

Important

Please read this manual carefully before operating this product.
Keep this manual for further reference.



Parts identification

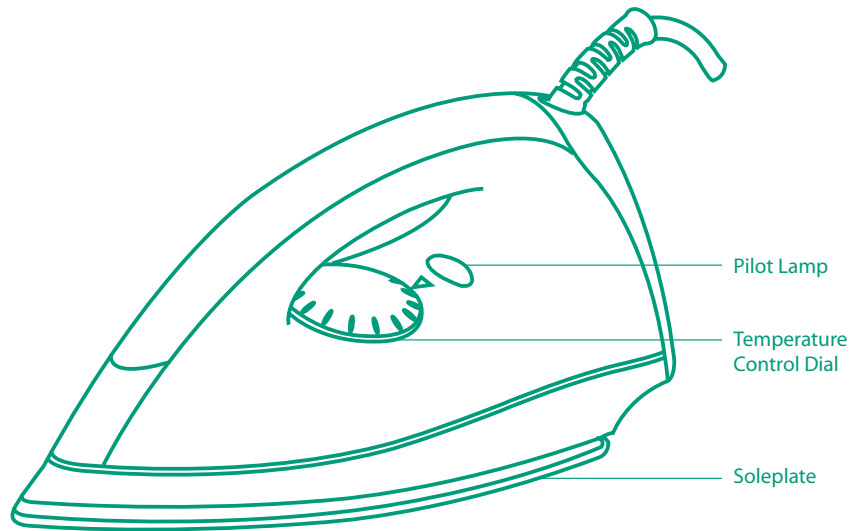

Specifications

Model	: EI 402
Voltage	: 220-240V~ 50/60Hz
Power	: 900-1100W
Gross Weight	: 0.8 Kg

*Specifications are subject to change without prior notice.

Caution

1. Never use the appliance if it is damaged in any way.
2. Do not touch the soleplate when the iron is functioning.
3. The cord set should not be allowed to touch the soleplate when it is hot.
4. Never immerse the iron in water to protect against an electrical shock hazard.



Caution

5.  Keep the soleplate smooth; avoid hard contact with metal objects.
6. Do not leave the iron unattended while it is connected to the main supply.
7. If the main cord of this appliance is damaged, it must be replaced by the original type only.
8. Avoid from ironing over zippers, buttons on jeans or any form of metal ornaments found on clothes as they may scratch the soleplate.
9. Never drop the iron. The iron is not to be used if it has been dropped, if there are visible signs of damage, please send to our authorised service centre for servicing.
10. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
11. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
12. Never yank cord to disconnect from power outlet. Grasp plug and pull to disconnect.
13. Always disconnect iron from electrical outlet when not in use.
14. Do not use this appliance for outdoor or any commercial purpose. This appliance is for household use only.
15. The iron must be used and rested on a stable surface.
16. When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.

Cleaning & Maintenance

1. Make sure the iron has cooled down and unplugged from power supply before cleaning.
2. Starch and other residue may be easily removed from the soleplate with a damp cloth.
3. To avoid scratching to the surface, never use abrasive, steel wool or metal implements that could scratch the surface.
4. To remove synthetic residue, set the Temperature Control Dial at "Max" position and pass the Iron over a clean piece of cotton which will draw the deposit off the surface.
5. When you have finish ironing, ensure the Temperature Control Dial is in the "MIN" position. Put the iron on its heel and allow it to cool down.