

1. Jangan menyentuh JARING VOLTAN TINGGI dengan tangan atau sebarang pengalir elektrik.
2. Jangan gunakan air untuk membersihkan pembunuhan serangga ini.
3. Jangan menyembur air ke arah JARING VOLTAN TINGGI bagi mengelakkan litar pintas.
4. Jangan letakkan unit ini berhampiran dapur yang banyak asap, bagi mengelakkan berlakunya kerosakan pada jejaring voltan tinggi.
5. Unit ini direka untuk kegunaan dalaman seperti di dalam rumah, restoran, kedai, pusat sukan dan tempat awam yang berbungung dan terlindung dari hujan.
6. Perkakas ini bukan untuk digunakan oleh orang ( termasuk kanak-kanak ) yang kurang upaya fizikal, deria atau kecacatan mental, atau kurang pengalaman dan pengetahuan, melainkan mereka diberi perhatian atau tunjuk ajar berkaitan penggunaan perkakas oleh orang yang bertanggungjawab untuk keselamatan mereka. Kanak-kanak haruslah diperhatikan untuk memastikan mereka tidak bermain dengan perkakas ini.
7. Jika talikod telah rosak, ia mesti diganti oleh pengilang, wakil servis atau orang yang berkelayakan untuk mengelakan sebarang bahaya.
8. Letakkan di ruang yang mempunyai pengudaraan mencukupi seperti berdekatan pintu, beranda, koridor atau di atas kabinet.
9. Elakkan dari dedahan terus kepada matahari, hujan dan jauhkan dari kanak-kanak.
10. Letak atau gantung unit ini pada ketinggian 2-3 meter dari aras lantai.

## Penyelenggaraan

1. Tanggalkan plag dari soket sebelum melakukan penyelenggaraan.
2. Gunakan kain dengan pencuci untuk mengelap jejaring penghadang dan dulang takungan dengan lembut.
3. Gunakan kain lembap (perah dahulu) untuk mengelap jejaring voltan tinggi dan kemudian gunakan kain kering untuk mengelapnya.
4. Bersihkan unit ini dengan kerap apabila perlu.

**KHIND**  
Delivering Happiness



● ● ● Insect Killer / 捕虫机 /Pembunuhan Serangga

Instruction Manual / 说明书 /Buku Panduan

**Important / 重要/Mustahak**


Please read this manual carefully before operating this product. Keep this manual handy for future reference.

请在使用此产品前，详读此说明书。并将之收藏以作日后参考。

Sila baca buku panduan ini dengan teliti sebelum menggunakan produk ini. Simpanlah untuk rujukan masa depan.



This manual is also available online.

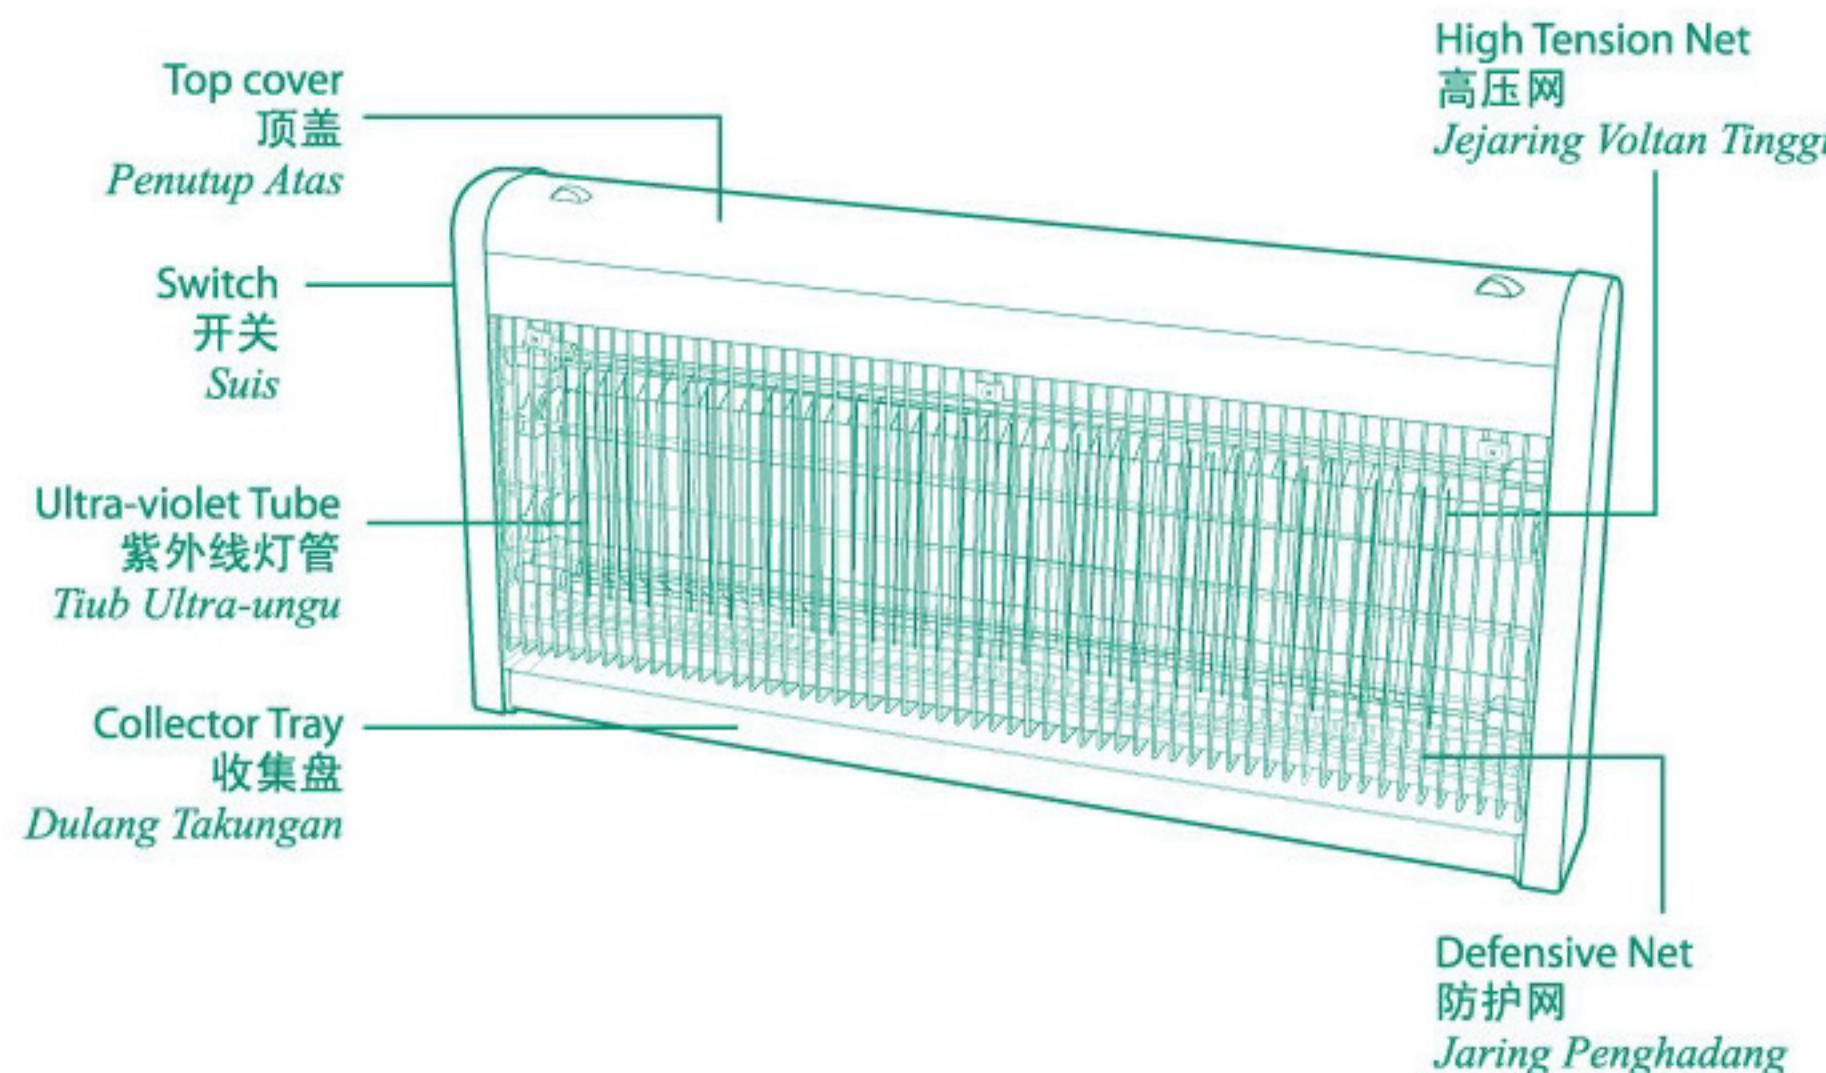

1. Do not touch the HIGH TENSION NET with hand or any electric conductor.  
不要用手或其他电导体来触碰高压网。
  2. Do not use water to clean this insect killer.  
不要使用清水来清理此捕虫机。
  3. Do not spray water on the HIGH TENSION NET to prevent short circuit.  
不要把水溅在高压网以避免电线短路。
  4. Please do not place this unit near the kitchen which is surrounded by a lot of smoke to avoid breakdown on the high tension net.  
请不要把此捕虫机放在靠近厨房那些周围都是烟围绕的地方以避免高压网损坏。
  5. This unit is designed for indoor use such as in houses, restaurants, shops, sports centres and public places which have roof or rain protection.  
此捕虫机只适合在有屋顶或挡雨的户内如家里，餐馆，店面，运动中心和公共场所使用。
  6. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.  
此电器不适合这些人士使用：小孩，体力弱及感官，精神上有障碍，缺少经验及知识者；除非有人监督或指示如何操作，并负责操作人的安全。  
小孩需紧密的监督，此电器严禁被小孩当玩具玩。
  7. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.  
当电源线损坏时，请送往维修中心，所授权的维修中心或拥有同等技术的人士替换。
  8. Put this unit at the places with sufficient ventilation like near the door, balcony and corridor or on the top of the cabinet.  
将此捕虫机放在空气流通的地方如靠近门，阳台和走廊或放在橱顶上。
  9. Avoid direct sunshine, rain and keep away from children.  
应避免直接曝晒，淋雨和远离小孩。
  10. Place or hang this unit at a height of 2-3 meters from the floor.  
在离地面2-3米的地方放置或吊起此捕虫机。
- #### Maintenance / 保养
1. Remove plug from the socket before doing any maintenance.  
进行保养前请先拔出插头。
  2. Use dish-cloth with cleaner to softly clean the defensive net and collector tray.  
使用软布和清洁剂轻柔的擦拭防护网和收集盘。
  3. Use wet dish-cloth (wring first) to clean the high tension net and then wipe with dry-cloth.  
使用湿布（先拧干）擦拭高压网后再用干布擦干。
  4. Clean the unit as frequently as possible.  
建议经常清理捕虫机。

Model / 型号 / Model	: IK 510	IK 520
Voltage / 电压 / Voltan	: 220-240V~ 50Hz	220-240V~ 50Hz
Power / 功率 / Kuasa	: 26W	43W
Tube / 灯管 / Tiub	: 2 x 10W Tubes / Tiub	2 x 20W Tubes / Tiub
Gross Weight / 毛重 / Berat Kasar	: 2.9 Kg	4 Kg
Box Dimension / 箱子尺寸 / Dimensi Kotak	: 435 x 105 x 325mm	705 x 98 x 325 mm

\* Specifications are subject to change without prior notice. 以上规格有任何的改变，恕无另行通知。  
Perubahan spesifikasi boleh dilakukan tanpa sebarang notis